
Part# 71762-82-E-XP Key Switch Conversion, CPC 1982-2000 Electric Cars

(E4S 71762-82 & XP-Soft Start & Early XP-PLUS)

(Late XP-PLUS)

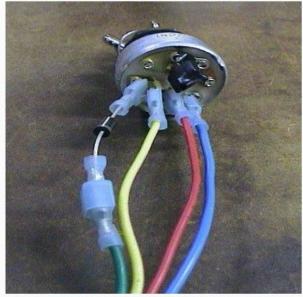



** IF GREEN WIRE ON CURRENT KEY SWITCH **

** IF ORANGE WIRE ON CURRENT KEY SWITCH **

Part Listing: 1ea. 71730-01 Key Switch, CPC (Note: Two spades are taped off and will not be used in this application)

1ea. 74886-67 (406) Diode

4ea.Push-on Connector, Female1ea.Push-on Connector, Male1ea.Split Double Connector

Tools Needed: Phillip Screw Driver, Wire Stripper, Wire Crimper, Channel Locks/Pliers

Warning * - Disconnect Main Negative Battery cable, Then disconnect Main Positive Battery Cable before starting the installation of this key switch conversion.

Remove drink cup holders from dash and remove nut off front of original switch. Pull key switch back through one of the drink cup openings for easy access.

** Warning: It is very important that the wires are properly arranged based on the pictures above. Note some wires are the same color in both pictures, however the location of the wires are different.

Disconnect all four (4) wires from original key switch. <u>Re-terminal</u> any wire that does not have the pushon female connector (<u>Included in this kit</u>). Based on wire harness, the color of one wire will be <u>Green</u> or <u>Orange</u>. Refer to picture above for proper connection.

- Re-connect Main Positive cable to battery and secure, then connect Main Negative cable to battery and secure.
 - ** If you have any difficulties installing this kit, please contact Kraft Golf Cars at the number above **
- Install complete.